



TECHNICAL SPECIFICATIONS

Bleeder Tube	62inch (160cm)
Extractor Hose	102inch (260cm)
Fluid Reservoir	4L
Refilling Bottle	1L

SAFETY INFORMATION

warning

- Keep your work area clean and well lit. Cluttered or dark areas invite accidents.
- Keep children and bystanders away while using this product.
- **DO NOT** allow people unfamiliar with this product or these instructions use it.
- **DO NOT** use this product while you are tired or under the influence of drugs, alcohol, or medication.
- Use safety equipment appropriate for your work. Always wear eye protection. Safety equipment such as non-skid safety shoes, hard hat, and heavy duty work gloves should be used.
- **DO NOT** use excessive pressure with this product.
- **DO NOT** allow the brake fluid reservoir to run dry during use.
- **ALWAYS** test the brakes after using this product before driving. Test during the first drive after use by going slowly and repeatedly pressing the brakes. **DO NOT** continue to drive if the brake pedal loses pressure or the brakes react weakly. Correct any problems before resuming use of the vehicle.
- Maintain this product. Check for misalignment or binding of parts, breakage of parts, or any other condition that may affect the product's operation. If damage is detected, have this product repaired before use.






SAFETY CAUTION:

Brake fluid is corrosive. When fluid spills, use water to flush away immediately.

OPERATING INSTRUCTION

1. Make sure the brake fluid reservoir on the car is well filled before starting the bleeding process. Remember to leave the reservoir open during bleeding. (Fig. 1/ Fig. 2)
2. Connect the bleeder hose (2) to brake fluid extractor and the bleeder nipple (3) on the brake caliper
3. Connect the air hose to the air inlet nipple (1), and turn the valve (4) on, brake fluid/ air will now be sucked out from the hydraulic brake system.
4. When the bleeder hose is filled with fluid that doesn't contain air bubbles, the bleeding is sufficient.
5. Now repeat steps above at the remaining three brake locations in the proper sequence. That means moving from the wheel farthest away from the master cylinder to the one next closest and so on.
6. To empty the bleeder, Open the cover (5) with a wrench and pour out the fluid. Make sure the brake fluid is disposed in safe way.

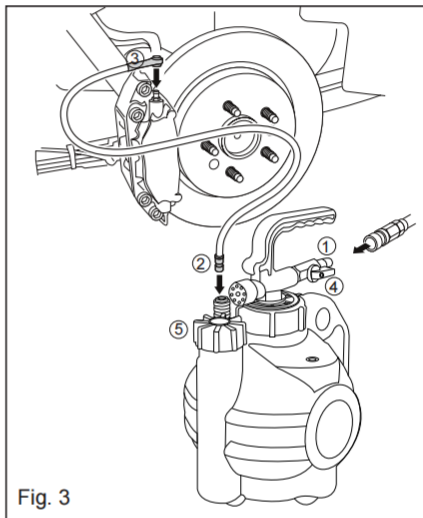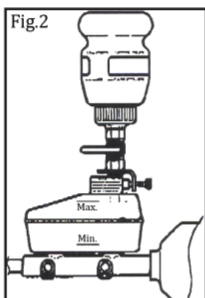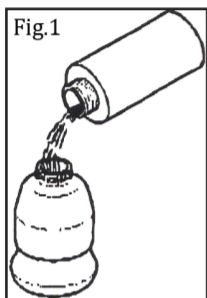

CARE AND MAINTENANCE

1. **Before each use:** Check any broken components, damaged hoses, loose connections, and any situations that may affect its safe operation. Do not use damaged equipment.
2. **When cleaning:** You can use the wrench to unscrew the pump, and use denatured alcohol to clean your brake bleeder. (Fig 4)
3. **When storing:** Do not store fluid in the bleeder. Dispose of excess fluid properly, according to federal, state, and local guidelines. Store the Vacuum Pump in a clean, dry location out of reach of children.
4. **WARNING!** All maintenance, service, or repairs not listed in this manual are only to be attempted by a qualified service technician.

WARRANTY

1. Consumers are entitled to a refund, replacement or maintenance with the order number when our product fails to operate during its normal use within the 30 days from the date to the sale. The warranty period for this product is 270 days. If a device fault occurs due to impersonal factors during the guarantee period, please contact us with the order number and we offer a free guarantee service.
2. We have a professional technical service team to serve you 24 hours a day. If you have any problems while using the product, please do not hesitate to contact our customer support team of PESIKO.

Need Help?

Let us make it right.

Send us a message via [Amazon](#) or contact us at

service@pesiko.com Explain your issue and provide your order information.

We will respond promptly!

