



INSTRUCTIONS FOR 6L MANUAL /PNEUMATIC DUAL-OPERATION OIL & FLUID EXTRACTOR



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.



ATTENTION

PLEASE WEAR PROTECTIVE EQUIPMENT SUCH AS EYE MASK, BREATHING MASK AND GLOVES WHEN EXTRACT OIL.


1. SAFETY INSTRUCTIONS

- ✓ Keep the extractor clean and maintain it in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Keep all non-essential persons away from the work area.
- ✓ Check extractor connections and fittings before use.
- ✓ Ensure that the tank capacity exceeds the amount of fluid to be collected.
- ✗ **DO NOT** use the extractor for any purpose other than that for which it is designed.
- ✗ **DO NOT** operate the extractor if any parts are damaged or missing as this may cause failure and/or personal injury.
- ✗ **DO NOT** leave the extractor operating unattended.
- ☐ **WARNING!** Engine oil will be hot when extracting.
- ✓ **IMPORTANT!** Ensure that you wear protective clothing, gloves, goggles, face mask as appropriate for the fluid being extracted.
- ☐ **WARNING! DO NOT** allow uncontrolled discharge of fluids thus polluting the environment.
- ✓ Dispose of waste fluids in accordance with local authority regulations.
- ☐ **WARNING! DO NOT** use with gasoline or other flammable liquids.
- ✗ **DO NOT** use the unit to extract dangerous chemicals, poisons, acids, alkalines or solvents.
- ✗ The container is not designed for long term storage.
- ✗ **DO NOT** store the unit under extreme conditions.
- ✗ **DO NOT** turn the container upsidedown when it is holding fluids.
- ✗ **DO NOT** adapt the unit for any other purpose.
- ✓ When not in use, disconnect from the air supply and store in a safe, dry, childproof area.

2. SPECIFICATION

6L dual-operation oil extractor is designed to drain bad fluids from cars, motorcycles, lawnmowers, marine engines, water crafts, stationary engines and industrial machinery. *Note: Gasoline, and fluid with high volatility, high corrosion, high alkalinity, high temperature are FORBIDDEN to be applied on the extractor. Supplied with Ø4mmØ6mmØ8mmx1m suction hoses and a Ø10mmx1.5m extension tube.

Capacity: 6 ltr
Suction Hose: Ø4 x 1000mm, Ø6 x 1000mm, Ø8 x 1000mm
Extension Tube: Ø10 x 1500mm
Operation: MANUAL / PNEUMATIC

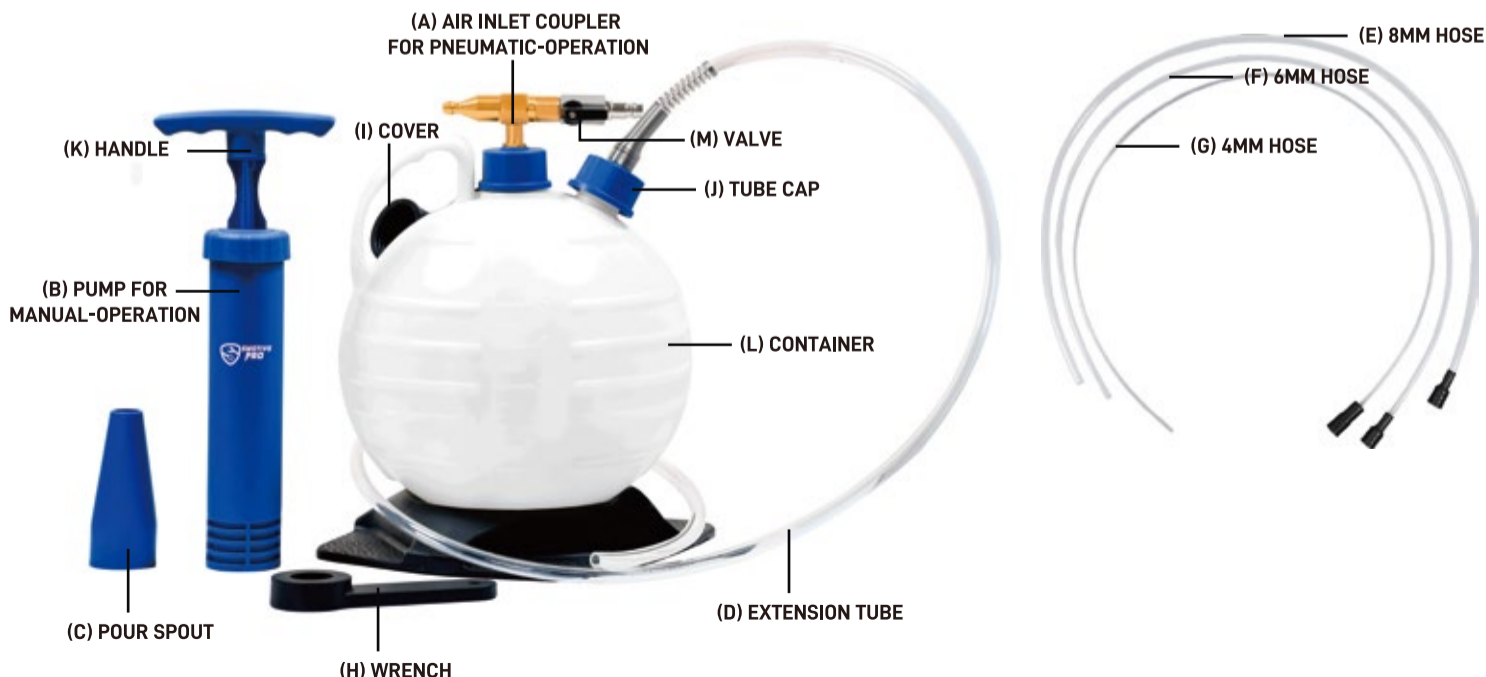

3. OPERATING INSTRUCTIONS

3.1. Before Using

3.1.1. Pre-run the engine for 10 minutes to heat the oil, allowing sludge or pollutants in the oil to mix and suspend.

3.2. Manual-Operation

3.2.1. Replace the **air inlet coupler (A)** with the **pump (B)**. Fig 1


3.2.2. Remove the oil dipstick and insert the **extractor hose(D-G)** into the oil pan. Fig 2

3.2.3. Start pumping **(k)**. Oil will flow out automatically. Fig 3

DO NOT PUMP CONTINUOUSLY- DO NOT FORCE THE PUMP HANDLE.

3.2.4. Remove the **pump (B)** and attach **cover (I)** to the **container(L)** after extracting. Fig 4

3.2.5. Remove **tube cap (J)** and attach **pour spout (C)** and empty oil (fluid) environmentally. Do not hold the container upside-down. Fig 5

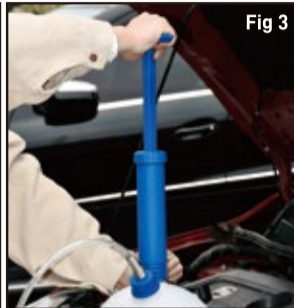

3.3. Pneumatic-Operation

3.3.1. Replace the **pump (B)** with the **air inlet coupler (A)**. Fig 1

3.3.2. Remove the oil dipstick and insert the **extractor hose(D-G)** into the oil pan. Fig 2

3.3.3. Connect the air hose to the **air inlet coupler (A)**, then opens the **valve(M)**, allowing the liquid to flow in automatically. Fig 3

3.3.4. Remove the **air inlet coupler (A)** and attach **cover (I)** to the **container(L)** after extracting. Fig 4

3.3.5. Remove **tube cap (J)** and attach **pour spout (C)** and empty oil (fluid) environmentally. Do not hold the container upside-down. Fig 5



4. MAINTENANCE

Keep clean, wipe off any fluid spillage. Keep the suction tubes clean and clear of blockages. Check that all tubes, hoses and connections are in good condition



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment.

unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note : It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important : No Liability is accepted for incorrect use of this product.

Warranty : Guarantee is 12 months from purchase date, proof of which is required for any claim.